




ROCKET POP-UP PLAYHOME


Assembly Instructions

P.O. Box 3054
City of Industry CA 91744
T: 626.333.4222
E: info@asweets.com
www.wonderandwise.com

Parts:

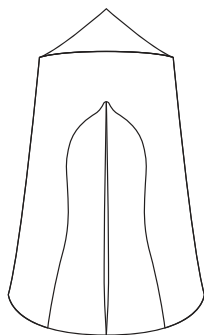

A x 1

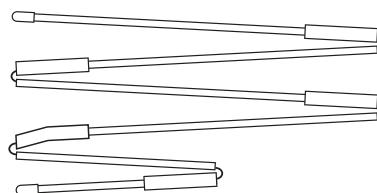

B x 4

⚠ WARNING!

Adult assembly recommended. Discard all packaging after assembly. Keep away from fire.


⚠ AVERTISSEMENT!

Danger d'étouffement. Montage de l'article à effectuer par un adulte. Retirer tous les emballages avant de donner le jouet à votre enfant. Les détails et couleurs du contenu peuvent varier. Informations à conserver. Attention! Tenir loin du feu!

⚠ ADVERTENCIA!


Peligro de asfixia. El montaje debe ser realizado por un adulto. Retire todo el embalaje antes de dar el juguete al niño. Los detalles y los colores pueden ser diferentes de los contenidos. Por favor guarde las instrucciones. Atención! Mantener lejos del fuego!

Step 01

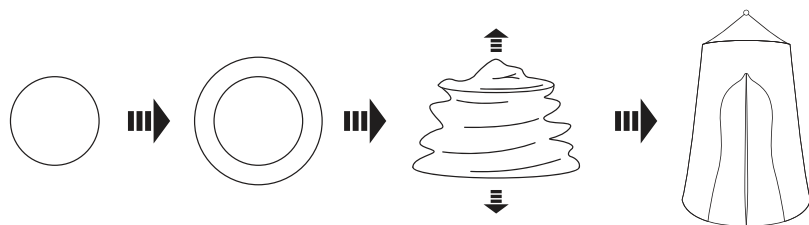


Slowly remove play tent from carry bag and expand fully. Tension creates pop up action.

Step 02

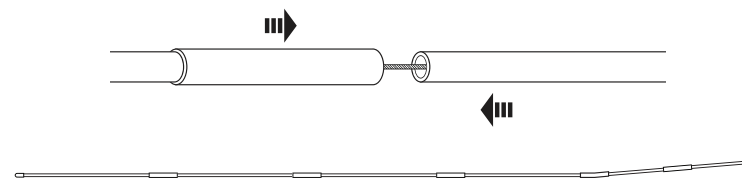

Assemble pole B-01 by connecting all joints together. Repeat for all 4 poles.

Step 03

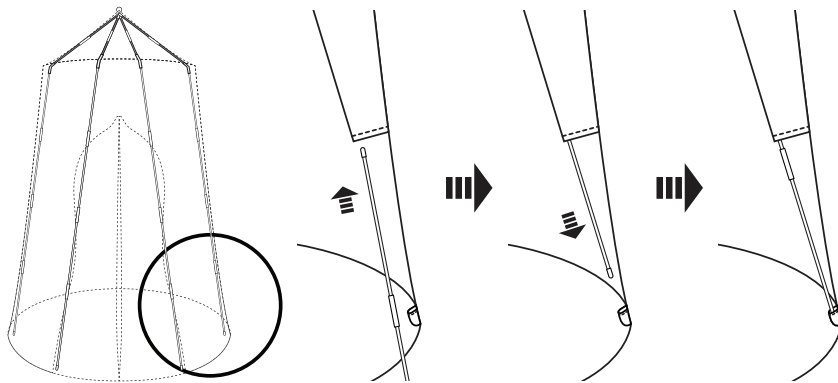

Hold the top of the canopy and insert one pole (B-01) into the top pocket. Insert the end of that pole into the bottom pocket. Repeat for all 4 poles. Place the canopy in the upright position.

Disassembly

