



WONDER & WISE
BY ASWEETS GLOBAL INC.
P.O. Box 3054, City of Industry CA 91744
wonderandwise.com


MADE IN CHINA

    @wonderandwise



Mud Kitchen

Assembly Instructions

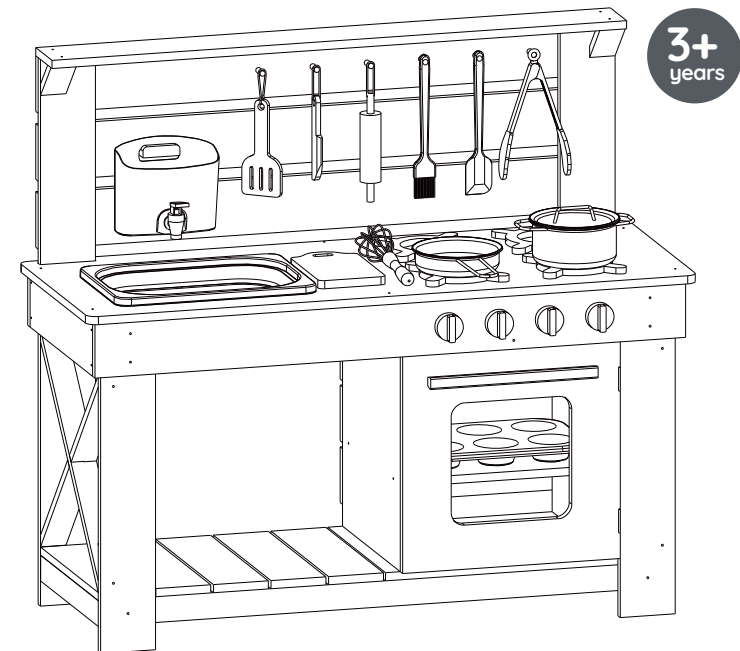

WARNING:
Keep away from flame.
Adult supervision recommended.
Assembly by an adult.


P.O. Box 30 54
City of Industry CA 91744
T: 626.333.42 22
E: info@asweets.com
www.wonderandwise.com

Designed in USA Made in China


Parts:



A x1



B x2



C x1



D x3



E x2



F x1



G x1



H x4



I x1



J x1




K x2




L x1




M x1

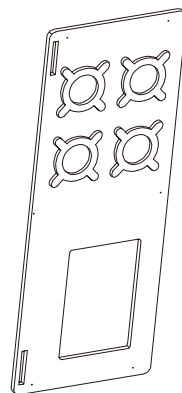

N x1

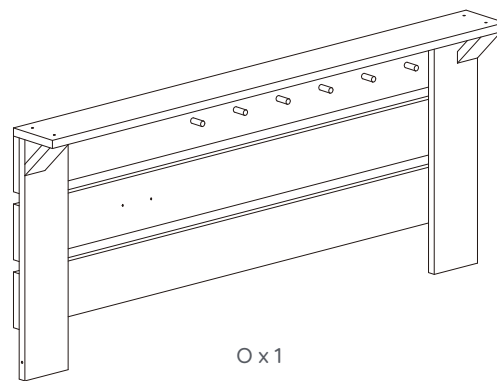

O x1

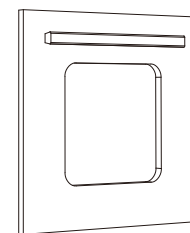

P x1



Q x1



R x38



S x24



T x8





U x2




V x1




W x1

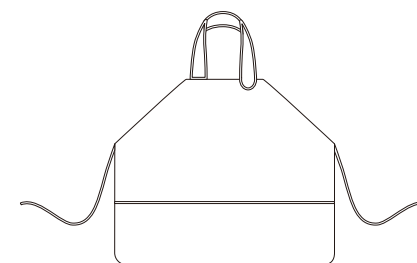


Step 1

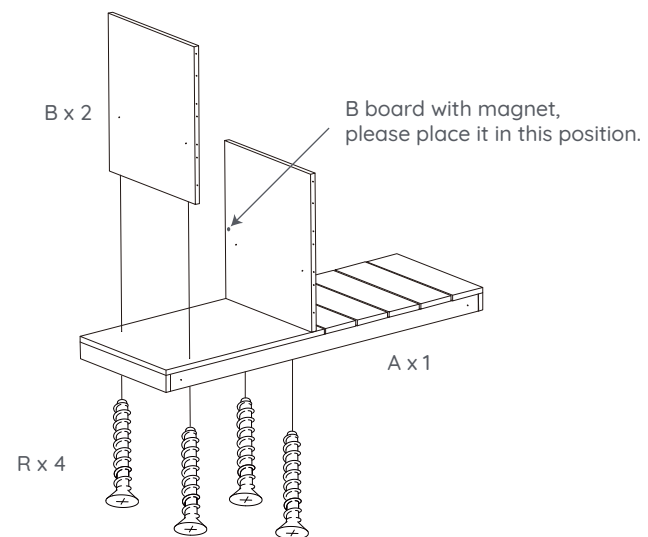


Step 3

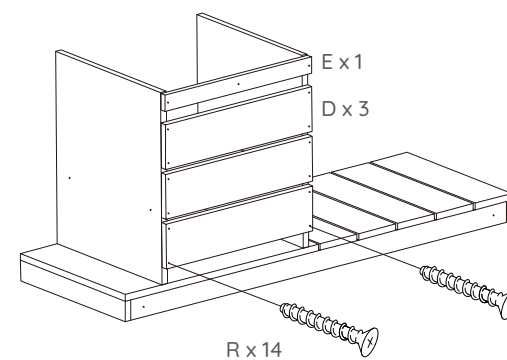


Step 2

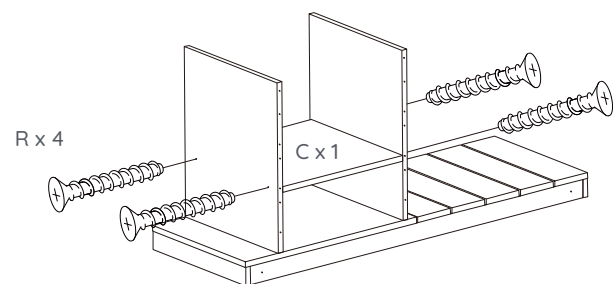


Step 4

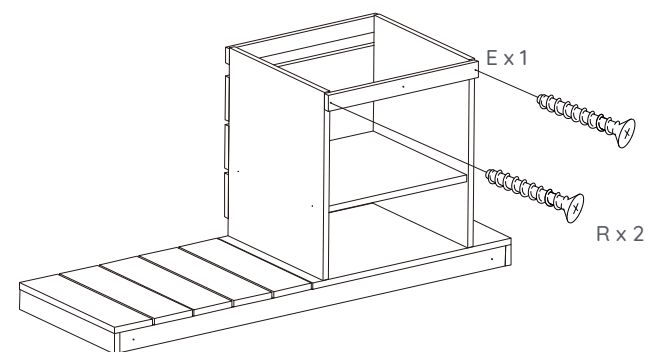


Step 5

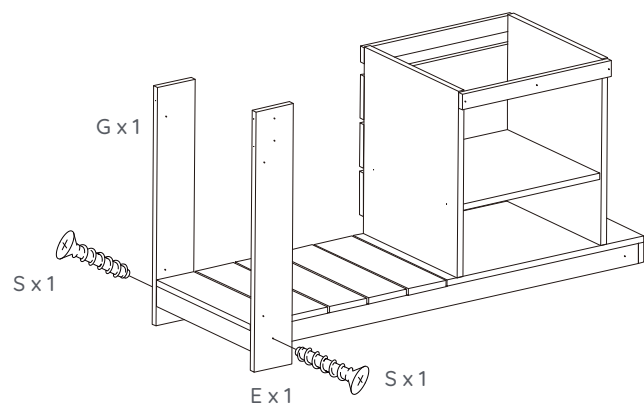


Step 7

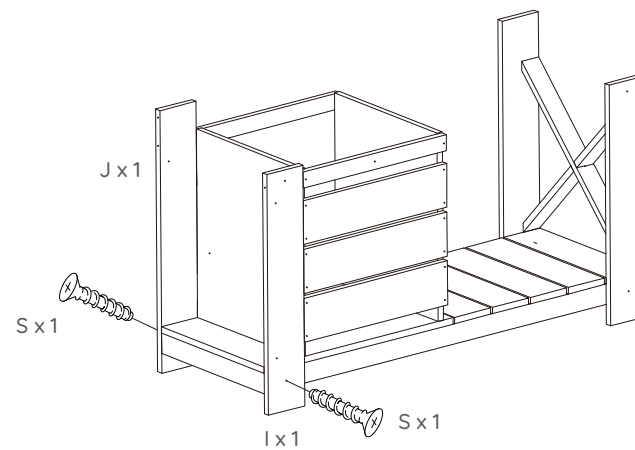


Step 6

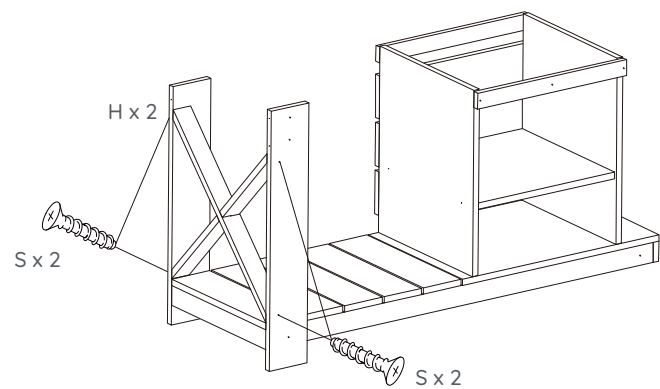


Step 8

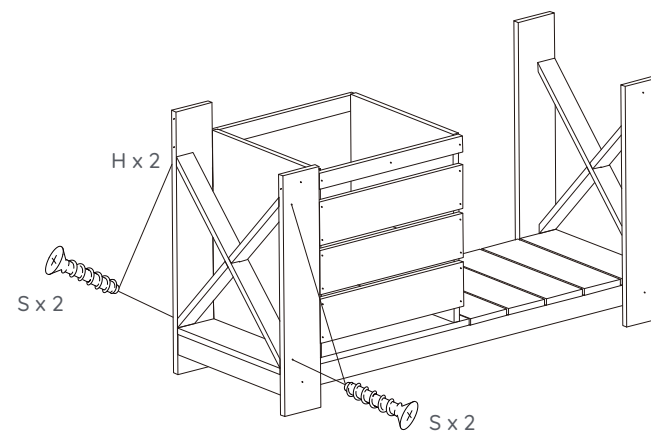


Step 9

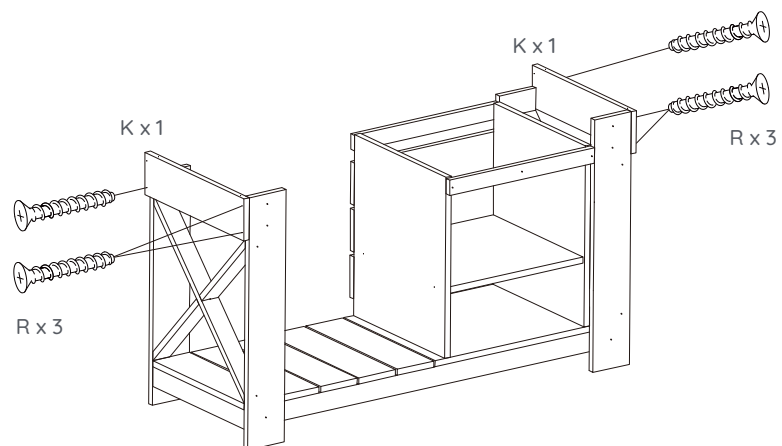


Step 11

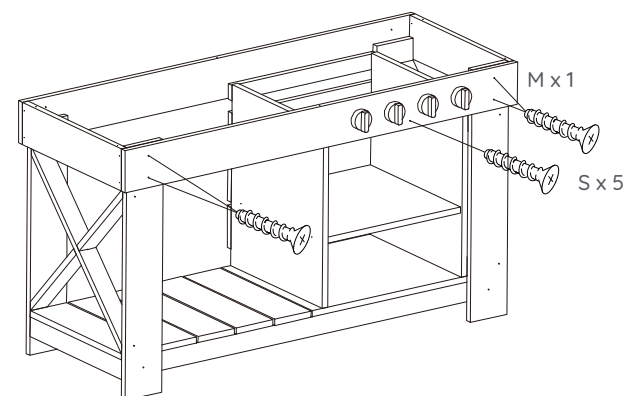


Step 10

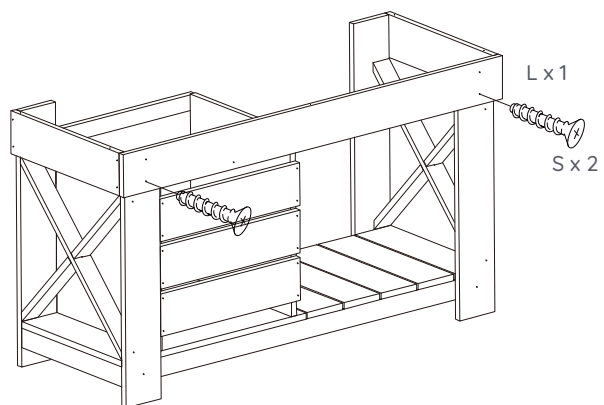


Step 12

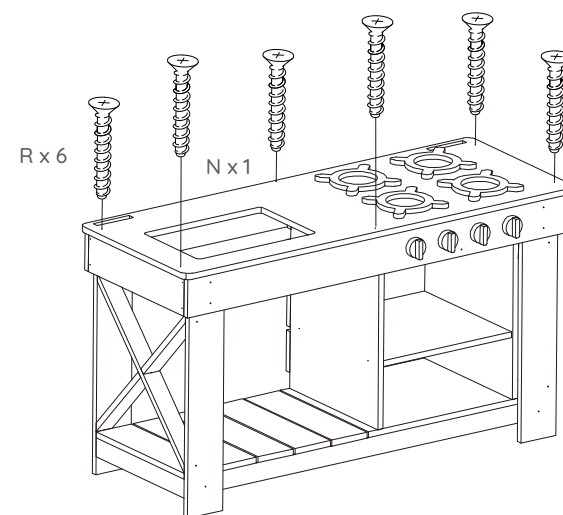

Step 13

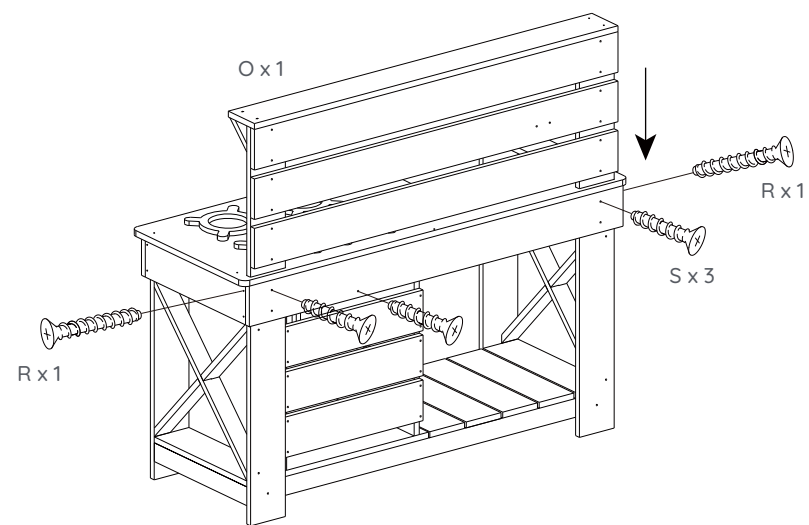

Step 14

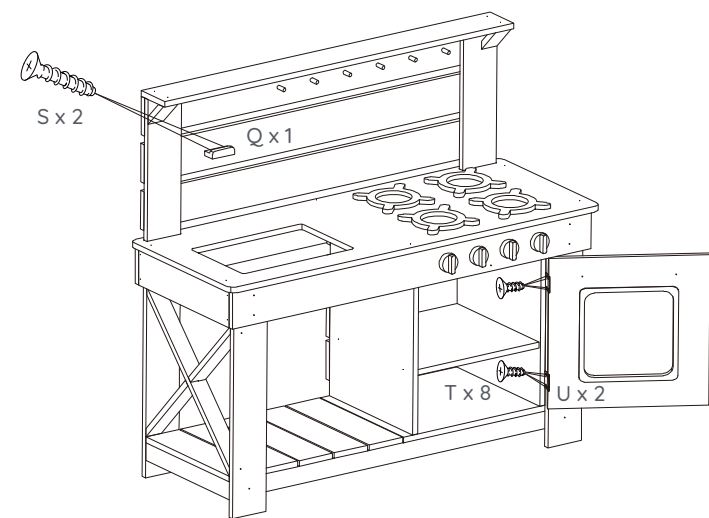

Step 15

